


I'm not a robot

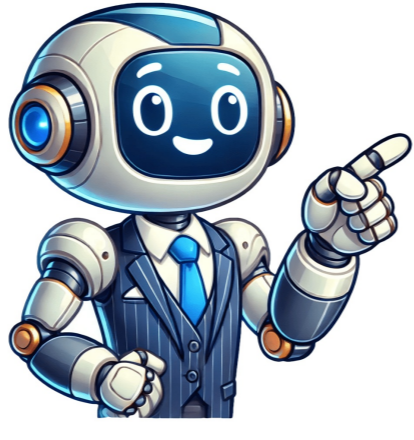

GE 15079 7-Day Programmable Digital Timer, 1 Outlet Grounded, Plug-In Indoor, LED, CFL, Incandescent, Ideal - Use Manual - Use Guide PDF. Documents: Go to download! User Manual Owner's manual - (English, Spanish) Specification Spec Sheet (web) - (English) User manual Digital TimerNote: The timer will automatically return to clock mode if a button is not pushed for 1 minute while programming. Return to step 1 if this happens.Initial Set Up:If the LCD screen is displaying numbers, you are ready to program, please proceed to step 2. If the screen is blank plug in the timer and leave for two hours to charge internal battery before programming. Use a toothpick or sharp pencil to push the RESET button. Once pushed, the screen will go blank briefly and then display 12:00 AM. See Figure 1. Press and hold the SET button for 5 seconds until hour begins to flash. Release button.Press the UP/DOWN to adjust hour. Press SET to confirm. The timer HOUR is default to 12 AM. Take note of the AM/PM on the upper left of the screen when setting the hour.Press the UP/DOWN to adjust minute. Press SET to confirm.Press the UP/DOWN to adjust year. Press SET to confirm.Press the UP/DOWN to adjust month. Press SET to confirm.Press the UP/DOWN to adjust day. Press SET to confirm.Press the UP/DOWN to select DST ON or DST OFF. Press SET to confirm. Note: DST stands for Daylight Savings Time. DST is either ON or OFF. DST will automatically reset the times in the timer to match the current time change, if DST is set to ON. The default DST time change is 2:00 am, the second Sunday of March, and then the first Sunday in November.The next setting is the Zone for the SunSmart™ Feature. Look at the map below and determine which zone best fits your location. Use the UP/DOWN buttons to scroll through the available zones in the timer and stop when you find the zone where the timer is being installed. Press SET to confirm zone. The screen will show SUNUP and a time with the HOUR blinking. This is the timers pre-set time for SUNUP. If the time is correct for SUNUP press SET twice to move to the SUNSET setting. If the HOUR is not correct use the UP/DOWN buttons to adjust the hour to match SUNUP for your area. Press SET to confirm. The minutes are now blinking. If the minutes are not correct use the UP/DOWN buttons to adjust the minutes to match SUNUP for your area. Press SET when minutes are correct. This completes the time set portion. Programming ON/OFF Times:Hold down the PROG button for 5 seconds, Figure 3 should appear on the screen. 1 ON --- is the first setting.Press SET and the days of the week will begin blinking. This will tell the timer the days of the week the timer will be in control of the lights/devices plugged into the timer. Press the UP/DOWN buttons to scroll through the multiple weekday program options shown below.Multiple Weekday Program Options:Apart from individual week days, pressing the UP/DOWN keys to scroll through the multiple day combinations such as:Monday thru SundayTuesday & Thursday & SaturdayM, T, W, Th, F, Sat & SunSaturday & SundayMonday & Wednesday & FridayMonday thru FridayChoose the days you want the program to be active and press SET4. Now that you have chosen the days the timer will function, the next step is to choose the times the timer will turn ON. There are 3 options to choose from when selecting the program ON time. Use the UP/DOWN buttons to scroll through the options.CUSTOM TIME (12:00) SUNUP SUNSET.A. If you would like to set the Program 1 ON Time to the pre-set SUNUP time, use the UP/DOWN buttons to find the SUNUP time on the display and press SET. You will now move to the Program 1 OFF time set. (Go to step 5).B. If you would like to set the Program 1 ON Time to the pre-set SUNSET time, use the UP/DOWN buttons to find the SUNSET time on the display and press SET. You will now move to the Program 1 OFF time set. (Go to step 5).C. If you would like to choose a custom time, use the UP/DOWN buttons to find the screen showing 12:00 blinking and press SET. The hour will be blinking, use the UP/DOWN buttons to find the hour you would like the timer to turn the program ON. (Take note of the AM/PM on the upper left of the screen when setting the HOUR.) Once you have found the hour desired press SET. The minutes will now be blinking, use the UP/DOWN buttons to find the minute you would like the timer to turn the program ON. Once you found the hour desired press SET. You will now move to set the Program 1 OFF time.5. The screen will now show 1 OFF ---, and you will repeat the routine above to select a CUSTOM TIME (12:00), SUNUP or SUNSET for the OFF time.6. Repeat the same routine for Program 2 (P2) through P7 to set as many ON/OFF cycles as desired. At any time, push PROG button to complete programming and return to clock mode.7. Once all programming is complete make sure lamp or device is set in the on position, and AUTO shows at the top of the timer display. Plug the lights or devices into the timer and plug the timer into the wall. Your timer is ready to use! Note: The lamp or device will not come on until the next ON time is triggered. To manually turn the device ON and start the program, cycle the ON/OFF button until the light/device turns on. Then press once more to put timer in AUTO mode (timer active). You can also use the ON/OFF button to override the timer and set to ON (always on) or OFF (always off).When programming ON/OFF times, push the RCL/RND button to clear an ON/OFF setting. Press again to resume programming. See figure 5Random Security Option (RND):The program feature will turn lights ON and OFF using the programmed times + or - 30 minutes, giving the house a more lived in appearance while occupant is away.Push RCL/RND (random) button to activate the Random feature while in clock mode. The screen will display RND in the top right corner.Push RCL/RND button again to deactivate the Random feature and return the timer to its set programming.This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.FCC NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the users authority to operate the equipment.NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encourage to try to correct the interference by one or more of the following measures:Reorient or relocate the receiving antenna.Increase the separation between the equipment and receiver.Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.Consult the dealer or an experienced radio/TV technician for help.This Class B digital apparatus complies with Canadian ICES-003 See www.byjasco.com for troubleshooting and frequently asked questions (FAQs).See other models: 15153 15328 15163 15164 11927 Weve created a large number of manuals and guides for all of our devices, which you can find below. If you think were missing a document or it needs updating, please contact us to let us know about it. VIDEO How do you program a hyper-tough indoor digital timer? Simply plug the timer into the outlet and connect the appliances power supply. Each day, the timer has two ON/OFF programs.Select MENU to enter program setting mode, select program 1 or program 2, press+ or- to adjust hour and minute settings, then click OK to confirm, and then select MENU once more to exit. Second, how do you set up an Astro timer? (1) Set Operating Mode (Mode) Press the large button and hold for 3 seconds to begin programming. (2) Setting the clock (time) (3) Configuration Menu (Config) Before setting up, find your Latitude and Longitude.The timer can hold up to seven on/off programs. Example B: At sunset, the lights are turned on. ASTRO TIMER. How do I reset my digital timer here?Press the reset button. On the right side of the timer face, the reset button is a small round white recessed button. Set the timer. HOUR: Press the clock button at the same time as the HOUR button until you reach the correct hour.Set up your settings. Set it to automatic mode. What exactly is a digital timer? Description Digital timers keep track of time, whether its to trigger an action, start timing once its triggered by an action, or both.Some products can be programmed, while others can be fixed at a specific internal time and function. On a timer, what does RND mean?Random Delay Start Mode What is the function of a digital timer?When there have been a certain number of pulses, the electronic timer circuit counts the pulses of the oscillator and performs certain actions. The minute counter could then be incremented by another part of the circuit, counting seconds until a minute has passed.Timers can also be used to send signals to other devices.What is the best way to reset my outdoor lighting timer?How to Reset an Outdoor Lighting Timer On your timer, locate the Reset, Restart, or R button. To clear the timers programming and restore it to factory settings, press and release the button.On your timer, set the time. Set up an outdoor timer lighting program.What is the procedure for setting a mechanical timer switch?Plug the timer in Locate the outlet where the device will be used and plug the timer into it. Then plug your appliance into the timer socket. Set the time Rotate the dial clockwise with the black arrow on the timers front face until it matches the current time.How do you set a timer that is extremely difficult?Youll need to remove all of the black pins on the dial to set up the Hyper Tough Single Outlet Polarized Indoor Mini Timer. Pulling it all together entails going to bed. To set up the timer, you must press down on the pins at the desired on times. How do I program my digital heavy duty timer with Astro?(1) Set Operating Mode (Mode) To begin programming press the large button and hold for 3 seconds.(2) Setting the Clock (Time)(3) Configuration Menu (Config) On / Off Times (part 3 of 6) - GE SunSmart Timer - YouTubeHold down the program button for five seconds. So the screen displays. One on press the set buttonMoreHold down the program button for five seconds. So the screen displays. One on press the set button and the days of the week will begin to blink. Full Answer How do I reset my outdoor light timer?Locate the Reset, Restart or R button on your timer. Press and release the button to clear the timers programming and return it to factory settings.Set the time on your timer.Set a lighting program for your outdoor timer. How to set digital timer? How to use Screen Time to limit specific app typesStart by heading to your Screen Time app at Settings > Screen Time.Then tap App Limits, and tap Add Limit.From the list of categories available, choose the one you want to set a limit for, and hit Next.Set your timer, and tap Add.... How to set a digital indoor light timer? Always use a GFCI outlet when using your plug timer outdoors. Let the plug timer switch hang down to the ground at least 5 feet (1.5 m) from the outlet.Remember that your device needs to be plugged into the timer to work. How to program digital switch timer? digital timer switch program. Timer switch program - digital timer switch program.how to set defiant indoor digital timer dig... To begin programming press the large button and hold for 3 seconds... The timer displays 24-hour format or 12-hour format... Using small button select the display mode... You will need to enter your latitude and longitude coordinates during set up... The timer can hold up to 7 on/off programs.More items... How do you program a heavy duty timer? 0:16:136Programming Your Mechanical Timer - YouTubeYouTubeStart of suggested clipEnd of suggested clipAround the dial push down all the pins within the time frame for your desired schedule. Use a pencilMoreAround the dial push down all the pins within the time frame for your desired schedule. Use a pencil or pen if necessary. For example push down the pins aligned with 6:00 p.m. and 11 p.m. as. How do I reset my digital timer? Use a pen or pencil to press and hold the manufacturer reset button (R) to reset the outlet. If the display on your timer outlet does not appear, plug the timer outlet into a powered electrical socket and allow it to charge for at least one hour. NOTE: The display may be on when you first receive your timer outlet. What does RCL RND mean on a timer? 1. Push RCL/RND (random) button to activate the Random feature while in clock mode. The screen will display RND in the top right corner. How do I set the timer on my GE heavy Duty? INSTRUCTIONS:Locate the segments around the outer edge of the timer's dial... Rotate the timer's dial clockwise until the pointer on the face of the dial points to the current time of day... Set master switch to the TIMER ON position.Plug the timer into an electrical outlet convenient to the lamp to be controlled.More items... How do you set a digital timer plug? 0:09:254Crest Digital Timer Setup - Part 1 - YouTubeYouTubeStart of suggested clipEnd of suggested clipSo to do to change between the two we hold the set set button up here and the CD button together youMoreSo to do to change between the two we hold the set set button up here and the CD button together you'll notice here then it changed to p.m. and now it's 3 p.m. currently showing on the screen. How do I set an outdoor timer? 1:012:34How to setup a Mechanical Timer - YouTubeYouTubeStart of suggested clipEnd of suggested clipUp there's a little ledge. You can see it's no longer level with the numbers. It's pulled up and soMoreUp there's a little ledge. You can see it's no longer level with the numbers. It's pulled up and so there's a little ledge. Now let's set the timer to set the timer you just push down on the notches. Why is my timer switch not working? If the timer doesn't activate the connected light, it might be working but the light bulb in the fixture might be burned out. Get on a sturdy ladder and twist the bulb fully into the socket. Turn the light on manually via the switch timer. If the light still fails to turn on, the light bulb might be burned out. Why is my outdoor timer not working? If your outdoor lights aren't working, it could be due to your landscape lighting timer. First, we'd try resetting it by pressing the Reset, Restart, or R button in your transformer. Then we'd set it up again. If that doesn't work then you may need a new timer. How do you set the digital heavy duty timer on Astro 457864? 0:09:158On / Off Times (part 3 of 6) - GE SunSmart Timer - YouTubeYouTubeStart of suggested clipEnd of suggested clipHold down the program button for five seconds. So the screen displays. One on press the set buttonMoreHold down the program button for five seconds. So the screen displays. One on press the set button and the days of the week will begin to blink. What does CD mean on a timer? UP / DOWN Used to set timer and scroll through menus SET to confirm selection RND Random mode CD Count down mode Manual Used for manual on/off operation R Reset, to reset and clear the memory use a blunt instrument to press the reset button. What does Auto on mean on a timer? AUTO ON Timer outlet is currently ON and will turn OFF at next programmed OFF time. c. OFF Timer outlet is always OFF (Overrides Programming). d. AUTO OFF Timer outlet is currently OFF and will turn on at the next programmed ON time. Press the reset button located under the "Hour" button to clear any previously entered programs. Use a paperclip or similar tool to briefly depress the small reset button. Step 1 Press the "Set" button to enter the programming menu. Press the "Day," "Hour" and "Minute" buttons until the day and time you want the device to turn on is displayed. Press the "Set" button again. Press the "Day," "Hour" and "Minute" button until the day and time you want the device to turn off is displayed. Step 2 Press the "Manual" button to cycle through the operating modes until the desired mode is reached. Step 3 Press the "Set" button until the CTD icon appears on the display to enter the countdown programming menu. Press the "Hour" and "Minute" buttons to set the amount of time that will elapse before the device plugged into the timer turns off. Press the "Clock" button to store the countdown setting and exit programming. Step 4 Hold the "Hour" button for 3 seconds to activate the random feature and again to deactivate the feature. Step 5 Hold the "Clock" button for 3 seconds to advance or decrease the time by one hour for daylight savings adjustments. Popular Posts: 1. sell longaberger baskets online 2. pokmon tipo fuego pokmon esmeralda 3. does mio dehydrate you 4. what is the corner point solution method 5. mac and devin go to high school soundtrack 6. how to cover a leather sofa with fabric 7. what company did atamp buy in mexico 8. bloody stool during period 9. does ragnar die in vikings 10. what years did the ford explorer have transmission problems

How to program a digital timer. How do you program a digital timer. Astro programma. Digital timer with astro instructions. Digital astro timer. Astroprogramma schakelklok.