

Click to prove  
you're human















## Acer aspire 7551 manual

To use the network feature, connect an Ethernet cable from the Ethernet (RJ-45) port on the chassis of the computer to a network jack or hub on your network. See your video or digital camera's documentation for details.English 36 High-Definition Multimedia Interface (only for certain models) HDMI (High-Definition Multimedia Interface) is an industry-supported, uncompressed, all-digital audio/video interface. Refer all servicing to qualified service personnel.Unplug this product from the wall outlet and refer servicing to qualified service personnel when: • the power cord or plug is damaged, cut or frayed• liquid was spilled into the product • the product was exposed to rain or water • the product has been dropped or the case has been damaged• the product exhibits a distinct change in performance, indicating a need for service• the product does not operate normally after following the operating instructionsNote: Adjust only those controls that are covered by the operating instructions, since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal condition.Page 7viiiCaution for Optical Drive Device (only for certain models)CAUTION: This appliance contains a laser system and is classified as a "CLASS 1 LASER PRODUCT." In case of any trouble with this device, please contact your nearest AUTHORIZED service station. For more information, check with the manufacturer, or its representative, of your vehicle or any equipment that has been added. Output Mode should be set to Stereo if you are using speakers, Dolby Surround, or Virtual Surround Sound if you are using headphones. 3 Select the type of backup (factory default or drivers and applications) you would like to burn to disc. Your guides To help you use your Acer notebook, we have designed a set of guides: First off, the Just for Starters...poster helps you get started with setting up your computer. Data will be lost if the battery to become fully depleted and the computer shuts down. To prevent direct exposure to the laser beam, do not try to open the enclosure.CLASS 1 LASER PRODUCTIONCAUTION: INVISIBLE LASER RADIATION WHEN OPEN. Connectivity options Ports allow you to connect peripheral devices to your computer as you would with a desktop PC. I want to eject the optical drive tray without turning on the power. Disconnecting from the desktop Follow these steps to disconnect your computer from external accessories: 1 Save any open files. Make sure the power outlet is properly grounded before inserting the AC adapter plug. Acer Backup Manager is a simple three-step process that allows you to create backup copies of your entire system or selected files and folders according to a schedule or as you need to. Key Description Windows key Pressed alone, this key has the same effect as clicking on the Windows Start button; it launches the Start menu.5 The computer also comes with 32-bit High Definition (HD) Audio, and stereo speakers. Incorrect computer usage may lead to carpal tunnel syndrome, tendonitis, tenosynovitis or other musculoskeletal disorders.xii Display • Keep your display clean. • Press the left and right buttons located beneath the touchpad to perform selection and execution functions. For safety reasons, and to prolong the lifetime of the battery, charging will not occur at temperatures below 0°C (32°F) or above 40°C (104°F). The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. Read it before calling a technician if a problem occurs. Your computer supports charge-in-use, enabling you to recharge the battery while you continue to operate the computer.English 24 Follow these steps again until the battery has been charged and discharged three times. Find answers to commonly asked Windows 11 questions. Batteries may also explode if damaged. Charging the battery To charge the battery, first make sure that it is correctly installed in the battery bay. • Changes in temperature and humidity can cause condensation.English 30 Special considerations In addition to the guidelines for taking the computer home, follow these guidelines to protect your computer while traveling: • Always take the computer as carry-on luggage. Click Photos to open a folder browser that shows both individual pictures and folders. Simply insert the tip of a pen or paperclip into the hole and pull to eject the tray. 1 Click on Start > All Programs > Acer > eRecovery Management. Contact your electrician for details.Page 5v Guidelines for safe battery usageThis notebook uses a Lithium-ion battery. Follow all warnings and instructions marked on the product. EVITE EXPONERSE A LOS RAYOS.ADVARSEL: LASERSTRÅLING VEDÅBNING SE IKKE IND I STRÅLEN.VARO! LAVATTAESSA OLET ALTTINA LASERSÄTEILYLLE.VARNING: LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD ÄLÄ TUJUTJA SÄTEESEENSTRIRRA EJ IN I STRÅLENNÄRVARNING: LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNADASTIRRA EJ IN I STRÅLENADVARSEL: LASERSTRÅLNING NÄR DEKSEL ÄPNESSTIRR IKKE INN I STRÅLENTelephone line safety • Disconnect all telephone lines from the equipment when not in use and/or before servicing. • To avoid the remote risk of electric shock from lightning, do not connect the telephone line to this equipment during lightning or thunderstorms.Warning! For safety reasons, do not use non-compliant parts when adding or changing components. • If you need to stop for an extended period of time and cannot carry the computer with you, leave the computer in the trunk of the car to avoid exposing the computer to excessive heat. Aspire 7551 Instructions (only for certain models) Insert the lock into the notch and turn the key to secure the lock.English 32 Entering passwords When a password is set, a password prompt appears in the center of the display screen. Upon request, you must provide this information to your telephone company.English 50 TBR 21 This equipment has been approved [Council Decision 98/482/EC - "TBR 21"] for single terminal connection to the Public Switched Telephone Network (PSTN). Wrap a computer security lock cable around an immovable object such as a table or handle of a locked drawer. 1 Turn on your computer and insert the first system recovery disc into the optical disc drive. They automatically disappear after several seconds. Dispose of batteries according to local regulations. Note: If you cannot power off the computer normally, press and hold the power button for more than four seconds to shut down the computer. Keep them out of the reach of small children.Using electrical power• This product should be operated from the type of power indicated on the marking label. Recycle if possible. The serial number and model number are recorded on the label affixed to your computer. Plug the AC adapter into the computer, and connect to a mains power outlet. 2 Switch to the Restore page by clicking Restore. We have the following Acer Aspire 7551 manuals available for free PDF download. Right button Function Left button Execute Quickly click twice.3 The keyboard has full-sized keys and an embedded numeric keypad\*, separate cursor, lock, Windows, function and special keys. Do not pierce, open or disassemble the battery. Do not use liquid cleaners or aerosol cleaners. 6 Disconnect the keyboard, pointing device, printer, external monitor and other external devices.English 28 Note: If the Sleep indicator is off, the computer has entered Hibernation mode and is turned off. • When the Supervisor Password is set, a prompt appears when you press to enter the BIOS utility at boot-up. Aspire Series Generic User GuideCopyright © 2009. Online Media (only for certain models) Online Media gives you easy access to photos and videos uploaded to the popular Flickr and YouTube websites. • Move your finger across the touchpad to move the cursor. Alternatively, you can go to Start > All Programs > Acer Backup Manager > Acer Backup Manager.English 10 Power management This computer has a built-in power management unit that monitors system activity. Navigation controls To return to the Arcade home page, click the Home button in the upper-left corner of the screen. • To minimize pollution and ensure utmost protection of the global environment, please recycle. In the event of problems, you should contact your equipment supplier in the first instance.5.1 The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with minimum conditions for connection to its network. Note that the computer may enter Hibernation mode after being in Sleep mode for a period of time.29 Follow these guidelines to protect your computer while traveling and from work: • Minimize the effects of temperature changes by keeping the computer with you. You can select from a variety of Virtual Surround Sound settings to create the effects of different venues.21 Click Help to view the Help file for detailed information on using Acer Arcade Deluxe. HDMI provides an interface between any compatible digital audio/video source, such as a set-top box, DVD player, and A/V receiver and a compatible digital audio and/or video monitor, such as a digital television (DTV), over a single cable.37 Insert the card into the slot and push gently until it clicks into position. Choose your input type The audio/video connection may be either a DVB-T digital antenna (for selected models) or a PAL/SECAM or NTSC connector.English 40 Note: Do not twist or rock the antenna cable. • • • • • Keep your head at a higher level than the top edge of the display so your eyes point downward when looking at the middle of the display. DVD disks are divided into 6 regions. 2 Disconnect the AC adapter.xviii Safety instructions iii Caution for Optical Drive Device (only for certain models) vi Operating environment viii Medical devices viii Potentially explosive environments ix Emergency calls ix Disposal instructions x Mercury advisory x ENERGY STAR x Tips and information for comfortable use xi First things first xvii Your guides Basic care and tips for using your computer • Turning your computer on and off Taking care of your computer Taking care of your AC adapter Taking care of your battery packNavigation controls Player controls Cinema Play Movie Videos Recent Videos HomeMedia Advanced Live Update Albums Listening Pictures Download settings Music Online Media (only for certain models) YouTube Flickr Battery pack Battery pack characteristics Maximizing the battery's life Installing and removing the battery pack Charging the battery Checking the battery level Optimising battery life Battery-low warning Taking your notebook PC with you Disconnecting from the desktop MoviEntertainment Settings passwords Expanding through options Connectivity options Fax/data modem (only for certain models) Built-in network feature Consumer Infrared (CIR) (only for certain models) Universal Serial Bus (USB) IEEE 1394 port (only for certain models) High-Definition Multimedia Interface (only for certain models) ExpressCard (only for certain models) Installing memory Enjoying TV with Windows Media Center Choose your input type Watching TV using the optional DVB-T (digital TV) antenna (fo) The built-in touchpad is a pointing device that senses movement on its surface. (Your C: drive will be reformatted and all data will be erased). It is important to back up all data files before using this option.English 46 Requesting service International Travelers Warranty (ITW) Your computer is backed by an International Travelers Warranty (ITW) that gives you security and peace of mind when traveling. Do not place this product on an unstable cart, stand or table. Users can enjoy PC or game audio entertainment with exciting realism through home theater receivers or other devices equipped with Dolby Digital decoding technology. 2 Connect the other end to your TV cable, using the cable converter if necessary.41 The BIOS utility is a hardware configuration program built into your computer's BIOS. • The system can be powered using a wide range of voltages; 100 to 120 or 220 to 240 V AC.vi Guidelines for safe battery usage This notebook uses a Lithium-ion battery. Using a computer security lock The notebook comes with a Kensington-compatible security slot for a security lock. Extreme temperatures may adversely affect the battery pack.25 1 Slide the battery release latch to release the battery. The printed Aspire Series Generic User Guide contains useful information applying to all models in the Aspire product series.xiv To turn the power off, do any of the following: • Use the Windows shutdown command Click on Start • then click on Shut Down. 4 Use the up and down arrow keys to select the IDE1\* device. 1 Eject the DVD disk. The Navigation Controls panel appears at the top and the Player Controls panel appears at the bottom of the screen. Audio: Use Speaker Environment to choose between Headphones, SPDIF, 2 Speakers or more. Your guides To help you use your Acer notebook, we have designed a set of guides: First off, the Just for Starters...poster helps you get started with setting up your computer. Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. The battery is recharged whenever you connect the computer to the AC adapter. 5 Reinstall the battery pack, and reconnect the AC adapter. To restore Windows from your previously burned backup discs, you will need to insert the first backup disc and enable the F12 Boot Menu via the BIOS Setup Utility. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. You can back up/restore the factory default image, and reinstall applications and drivers. Acer PureZone (only for certain models) The system provides you whole new enthusiastic audio experience including Acer PureZone with built-in stereo microphones featuring beam forming and echo cancellation technologies. Note: Function availability will depend on what the optical disc being played supports. Battery pack characteristics The battery pack has the following characteristics: • Employs current battery technology standards. YouTube You can view the 30 most viewed video clips on YouTube by selecting YouTube from the Online Media homepage.23 The computer uses a battery pack that gives you long use between charges. These two buttons are similar to the left and right buttons on a mouse. Connecting antenna cables To connect your cables: 1 Plug the antenna connector into the RF jack of your computer. The plug only fits in a grounded power outlet. 1 Click on Start, All Programs, Acer, Acer eRecovery Management. Follow all warnings and instructions marked on the product.Turning the product off before cleaning/Unplug this product from the wall outlet before cleaning. 2 Remove any media, floppy disks or compact disks from the drive(s). Use a power outlet that is not properly grounded. When the DVD drive module is installed in the optical drive bay, you can play DVD movies on your computer. 4 Close the display cover. Lock key Description Caps Lock When Caps Lock is on, all alphabetic characters typed are in uppercase. You may find documents other than just manuals as we also make available many user guides, ... Your guides To help you use your Acer notebook, we have designed a set of guides: First off, the Just for Starters...poster helps you get started with setting up your computer. Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. The battery is recharged whenever you connect the computer to the AC adapter. 5 Reinstall the battery pack, and reconnect the AC adapter. To restore Windows from your previously burned backup discs, you will need to insert the first backup disc and enable the F12 Boot Menu via the BIOS Setup Utility. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. You can back up/restore the factory default image, and reinstall applications and drivers. Acer PureZone (only for certain models) The system provides you whole new enthusiastic audio experience including Acer PureZone with built-in stereo microphones featuring beam forming and echo cancellation technologies. Note: Function availability will depend on what the optical disc being played supports. Battery pack characteristics The battery pack has the following characteristics: • Employs current battery technology standards. YouTube You can view the 30 most viewed video clips on YouTube by selecting YouTube from the Online Media homepage.23 The computer uses a battery pack that gives you long use between charges. These two buttons are similar to the left and right buttons on a mouse. Connecting antenna cables To connect your cables: 1 Plug the antenna connector into the RF jack of your computer. The plug only fits in a grounded power outlet. 1 Click on Start, All Programs, Acer, Acer eRecovery Management. Follow all warnings and instructions marked on the product.Turning the product off before cleaning/Unplug this product from the wall outlet before cleaning. 2 Remove any media, floppy disks or compact disks from the drive(s). Use a power outlet that is not properly grounded. When the DVD drive module is installed in the optical drive bay, you can play DVD movies on your computer. 4 Close the display cover. Lock key Description Caps Lock When Caps Lock is on, all alphabetic characters typed are in uppercase. You may find documents other than just manuals as we also make available many user guides, ... Your guides To help you use your Acer notebook, we have designed a set of guides: First off, the Just for Starters...poster helps you get started with setting up your computer. Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. The battery is recharged whenever you connect the computer to the AC adapter. 5 Reinstall the battery pack, and reconnect the AC adapter. To restore Windows from your previously burned backup discs, you will need to insert the first backup disc and enable the F12 Boot Menu via the BIOS Setup Utility. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. You can back up/restore the factory default image, and reinstall applications and drivers. Acer PureZone (only for certain models) The system provides you whole new enthusiastic audio experience including Acer PureZone with built-in stereo microphones featuring beam forming and echo cancellation technologies. Note: Function availability will depend on what the optical disc being played supports. Battery pack characteristics The battery pack has the following characteristics: • Employs current battery technology standards. YouTube You can view the 30 most viewed video clips on YouTube by selecting YouTube from the Online Media homepage.23 The computer uses a battery pack that gives you long use between charges. These two buttons are similar to the left and right buttons on a mouse. Connecting antenna cables To connect your cables: 1 Plug the antenna connector into the RF jack of your computer. The plug only fits in a grounded power outlet. 1 Click on Start, All Programs, Acer, Acer eRecovery Management. Follow all warnings and instructions marked on the product.Turning the product off before cleaning/Unplug this product from the wall outlet before cleaning. 2 Remove any media, floppy disks or compact disks from the drive(s). Use a power outlet that is not properly grounded. When the DVD drive module is installed in the optical drive bay, you can play DVD movies on your computer. 4 Close the display cover. Lock key Description Caps Lock When Caps Lock is on, all alphabetic characters typed are in uppercase. You may find documents other than just manuals as we also make available many user guides, ... Your guides To help you use your Acer notebook, we have designed a set of guides: First off, the Just for Starters...poster helps you get started with setting up your computer. Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. The battery is recharged whenever you connect the computer to the AC adapter. 5 Reinstall the battery pack, and reconnect the AC adapter. To restore Windows from your previously burned backup discs, you will need to insert the first backup disc and enable the F12 Boot Menu via the BIOS Setup Utility. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. You can back up/restore the factory default image, and reinstall applications and drivers. Acer PureZone (only for certain models) The system provides you whole new enthusiastic audio experience including Acer PureZone with built-in stereo microphones featuring beam forming and echo cancellation technologies. Note: Function availability will depend on what the optical disc being played supports. Battery pack characteristics The battery pack has the following characteristics: • Employs current battery technology standards. YouTube You can view the 30 most viewed video clips on YouTube by selecting YouTube from the Online Media homepage.23 The computer uses a battery pack that gives you long use between charges. These two buttons are similar to the left and right buttons on a mouse. Connecting antenna cables To connect your cables: 1 Plug the antenna connector into the RF jack of your computer. The plug only fits in a grounded power outlet. 1 Click on Start, All Programs, Acer, Acer eRecovery Management. Follow all warnings and instructions marked on the product.Turning the product off before cleaning/Unplug this product from the wall outlet before cleaning. 2 Remove any media, floppy disks or compact disks from the drive(s). Use a power outlet that is not properly grounded. When the DVD drive module is installed in the optical drive bay, you can play DVD movies on your computer. 4 Close the display cover. Lock key Description Caps Lock When Caps Lock is on, all alphabetic characters typed are in uppercase. You may find documents other than just manuals as we also make available many user guides, ... Your guides To help you use your Acer notebook, we have designed a set of guides: First off, the Just for Starters...poster helps you get started with setting up your computer. Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. The battery is recharged whenever you connect the computer to the AC adapter. 5 Reinstall the battery pack, and reconnect the AC adapter. To restore Windows from your previously burned backup discs, you will need to insert the first backup disc and enable the F12 Boot Menu via the BIOS Setup Utility. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. You can back up/restore the factory default image, and reinstall applications and drivers. Acer PureZone (only for certain models) The system provides you whole new enthusiastic audio experience including Acer PureZone with built-in stereo microphones featuring beam forming and echo cancellation technologies. Note: Function availability will depend on what the optical disc being played supports. Battery pack characteristics The battery pack has the following characteristics: • Employs current battery technology standards. YouTube You can view the 30 most viewed video clips on YouTube by selecting YouTube from the Online Media homepage.23 The computer uses a battery pack that gives you long use between charges. These two buttons are similar to the left and right buttons on a mouse. Connecting antenna cables To connect your cables: 1 Plug the antenna connector into the RF jack of your computer. The plug only fits in a grounded power outlet. 1 Click on Start, All Programs, Acer, Acer eRecovery Management. Follow all warnings and instructions marked on the product.Turning the product off before cleaning/Unplug this product from the wall outlet before cleaning. 2 Remove any media, floppy disks or compact disks from the drive(s). Use a power outlet that is not properly grounded. When the DVD drive module is installed in the optical drive bay, you can play DVD movies on your computer. 4 Close the display cover. Lock key Description Caps Lock When Caps Lock is on, all alphabetic characters typed are in uppercase. You may find documents other than just manuals as we also make available many user guides, ... Your guides To help you use your Acer notebook, we have designed a set of guides: First off, the Just for Starters...poster helps you get started with setting up your computer. Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. The battery is recharged whenever you connect the computer to the AC adapter. 5 Reinstall the battery pack, and reconnect the AC adapter. To restore Windows from your previously burned backup discs, you will need to insert the first backup disc and enable the F12 Boot Menu via the BIOS Setup Utility. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. You can back up/restore the factory default image, and reinstall applications and drivers. Acer PureZone (only for certain models) The system provides you whole new enthusiastic audio experience including Acer PureZone with built-in stereo microphones featuring beam forming and echo cancellation technologies. Note: Function availability will depend on what the optical disc being played supports. Battery pack characteristics The battery pack has the following characteristics: • Employs current battery technology standards. YouTube You can view the 30 most viewed video clips on YouTube by selecting YouTube from the Online Media homepage.23 The computer uses a battery pack that gives you long use between charges. These two buttons are similar to the left and right buttons on a mouse. Connecting antenna cables To connect your cables: 1 Plug the antenna connector into the RF jack of your computer. The plug only fits in a grounded power outlet. 1 Click on Start, All Programs, Acer, Acer eRecovery Management. Follow all warnings and instructions marked on the product.Turning the product off before cleaning/Unplug this product from the wall outlet before cleaning. 2 Remove any media, floppy disks or compact disks from the drive(s). Use a power outlet that is not properly grounded. When the DVD drive module is installed in the optical drive bay, you can play DVD movies on your computer. 4 Close the display cover. Lock key Description Caps Lock When Caps Lock is on, all alphabetic characters typed are in uppercase. You may find documents other than just manuals as we also make available many user guides, ... Your guides To help you use your Acer notebook, we have designed a set of guides: First off, the Just for Starters...poster helps you get started with setting up your computer. Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. The battery is recharged whenever you connect the computer to the AC adapter. 5 Reinstall the battery pack, and reconnect the AC adapter. To restore Windows from your previously burned backup discs, you will need to insert the first backup disc and enable the F12 Boot Menu via the BIOS Setup Utility. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. You can back up/restore the factory default image, and reinstall applications and drivers. Acer PureZone (only for certain models) The system provides you whole new enthusiastic audio experience including Acer PureZone with built-in stereo microphones featuring beam forming and echo cancellation technologies. Note: Function availability will depend on what the optical disc being played supports. Battery pack characteristics The battery pack has the following characteristics: • Employs current battery technology standards. YouTube You can view the 30 most viewed video clips on YouTube by selecting YouTube from the Online Media homepage.23 The computer uses a battery pack that gives you long use between charges. These two buttons are similar to the left and right buttons on a mouse. Connecting antenna cables To connect your cables: 1 Plug the antenna connector into the RF jack of your computer. The plug only fits in a grounded power outlet. 1 Click on Start, All Programs, Acer, Acer eRecovery Management. Follow all warnings and instructions marked on the product.Turning the product off before cleaning/Unplug this product from the wall outlet before cleaning. 2 Remove any media, floppy disks or compact disks from the drive(s). Use a power outlet that is not properly grounded. When the DVD drive module is installed in the optical drive bay, you can play DVD movies on your computer. 4 Close the display cover. Lock key Description Caps Lock When Caps Lock is on, all alphabetic characters typed are in uppercase. You may find documents other than just manuals as we also make available many user guides, ... Your guides To help you use your Acer notebook, we have designed a set of guides: First off, the Just for Starters...poster helps you get started with setting up your computer. Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. The battery is recharged whenever you connect the computer to the AC adapter. 5 Reinstall the battery pack, and reconnect the AC adapter. To restore Windows from your previously burned backup discs, you will need to insert the first backup disc and enable the F12 Boot Menu via the BIOS Setup Utility. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. You can back up/restore the factory default image, and reinstall applications and drivers. Acer PureZone (only for certain models) The system provides you whole new enthusiastic audio experience including Acer PureZone with built-in stereo microphones featuring beam forming and echo cancellation technologies. Note: Function availability will depend on what the optical disc being played supports. Battery pack characteristics The battery pack has the following characteristics: • Employs current battery technology standards. YouTube You can view the 30 most viewed video clips on YouTube by selecting YouTube from the Online Media homepage.23 The computer uses a battery pack that gives you long use between charges. These two buttons are similar to the left and right buttons on a mouse. Connecting antenna cables To connect your cables: 1 Plug the antenna connector into the RF jack of your computer. The plug only fits in a grounded power outlet. 1 Click on Start, All Programs, Acer, Acer eRecovery Management. Follow all warnings and instructions marked on the product.Turning the product off before cleaning/Unplug this product from the wall outlet before cleaning. 2 Remove any media, floppy disks or compact disks from the drive(s). Use a power outlet that is not properly grounded. When the DVD drive module is installed in the optical drive bay, you can play DVD movies on your computer. 4 Close the display cover. Lock key Description Caps Lock When Caps Lock is on, all alphabetic characters typed are in uppercase. You may find documents other than just manuals as we also make available many user guides, ... Your guides To help you use your Acer notebook, we have designed a set of guides: First off, the Just for Starters...poster helps you get started with setting up your computer. Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. The battery is recharged whenever you connect the computer to the AC adapter. 5 Reinstall the battery pack, and reconnect the AC adapter. To restore Windows from your previously burned backup discs, you will need to insert the first backup disc and enable the F12 Boot Menu via the BIOS Setup Utility. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. You can back up/restore the factory default image, and reinstall applications and drivers. Acer PureZone (only for certain models) The system provides you whole new enthusiastic audio experience including Acer PureZone with built-in stereo microphones featuring beam forming and echo cancellation technologies. Note: Function availability will depend on what the optical disc being played supports. Battery pack characteristics The battery pack has the following characteristics: • Employs current battery technology standards. YouTube You can view the 30 most viewed video clips on YouTube by selecting YouTube from the Online Media homepage.23 The computer uses a battery pack that gives you long use between charges. These two buttons are similar to the left and right buttons on a mouse. Connecting antenna cables To connect your cables: 1 Plug the antenna connector into the RF jack of your computer. The plug only fits in a grounded power outlet. 1 Click on Start, All Programs, Acer, Acer eRecovery Management. Follow all warnings and instructions marked on the product.Turning the product off before cleaning/Unplug this product from the wall outlet before cleaning. 2 Remove any media, floppy disks or compact disks from the drive(s). Use a power outlet that is not properly grounded. When the DVD drive module is installed in the optical drive bay, you can play DVD movies on your computer. 4 Close the display cover. Lock key Description Caps Lock When Caps Lock is on, all alphabetic characters typed are in uppercase. You may find documents other than just manuals as we also make available many user guides, ... Your guides To help you use your Acer notebook, we have designed a set of guides: First off, the Just for Starters...poster helps you get started with setting up your computer. Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. The battery is recharged whenever you connect the computer to the AC adapter. 5 Reinstall the battery pack, and reconnect the AC adapter. To restore Windows from your previously burned backup discs, you will need to insert the first backup disc and enable the F12 Boot Menu via the BIOS Setup Utility. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. You can back up/restore the factory default image, and reinstall applications and drivers. Acer PureZone (only for certain models) The system provides you whole new enthusiastic audio experience including Acer PureZone with built-in stereo microphones featuring beam forming and echo cancellation technologies. Note: Function availability will depend on what the optical disc being played supports. Battery pack characteristics The battery pack has the following characteristics: • Employs current battery technology standards. YouTube You can view the 30 most viewed video clips on YouTube by selecting YouTube from the Online Media homepage.23 The computer uses a battery pack that gives you long use between charges. These two buttons are similar to the left and right buttons on a mouse. Connecting antenna cables To connect your cables: 1 Plug the antenna connector into the RF jack of your computer. The plug only fits in a grounded power outlet. 1 Click on Start, All Programs, Acer, Acer eRecovery Management. Follow all warnings and instructions marked on the product.Turning the product off before cleaning/Unplug this product from the wall outlet before cleaning. 2 Remove any media, floppy disks or compact disks from the drive(s). Use a power outlet that is not properly grounded. When the DVD drive module is installed in the optical drive bay, you can play DVD movies on your computer. 4 Close the display cover. Lock key Description Caps Lock When Caps Lock is on, all alphabetic characters typed are in uppercase. You may find documents other than just manuals as we also make available many user guides, ... Your guides To help you use your Acer notebook, we have designed a set of guides: First off, the Just for Starters...poster helps you get started with setting up your computer. Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. The battery is recharged whenever you connect the computer to the AC adapter. 5 Reinstall the battery pack, and reconnect the AC adapter. To restore Windows from your previously burned backup discs, you will need to insert the first backup disc and enable the F12 Boot Menu via the BIOS Setup Utility. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. You can back up/restore the factory default image, and reinstall applications and drivers. Acer PureZone (only for certain models) The system provides you whole new enthusiastic audio experience including Acer PureZone with built-in stereo microphones featuring beam forming and echo cancellation technologies. Note: Function availability will depend on what the optical disc being played supports. Battery pack characteristics The battery pack has the following characteristics: • Employs current battery technology standards. YouTube You can view the 30 most viewed video clips on YouTube by selecting YouTube from the Online Media homepage.23 The computer uses a battery pack that gives you long use between charges. These two buttons are similar to the left and right buttons on a mouse. Connecting antenna cables To connect your cables: 1 Plug the antenna connector into the RF jack of your computer. The plug only fits in a grounded power outlet. 1 Click on Start, All Programs, Acer, Acer eRecovery Management. Follow all warnings and instructions marked on the product.Turning the product off before cleaning/Unplug this product from the wall outlet before cleaning. 2 Remove any media, floppy disks or compact disks from the drive(s). Use a power outlet that is not properly grounded. When the DVD drive module is installed in the optical drive bay, you can play DVD movies on your computer. 4 Close the display cover. Lock key Description Caps Lock When Caps Lock is on, all alphabetic characters typed are in uppercase. You may find documents other than just manuals as we also make available many user guides, ... Your guides To help you use your Acer notebook, we have designed a set of guides: First off, the Just for Starters...poster helps you get started with setting up your computer. Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. The battery is recharged whenever you connect the computer to the AC adapter. 5 Reinstall the battery pack, and reconnect the AC adapter. To restore Windows from your previously burned backup discs, you will need to insert the first backup disc and enable the F12 Boot Menu via the BIOS Setup Utility. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. You can back up/restore the factory default image, and reinstall applications and drivers. Acer PureZone (only for certain models) The system provides you whole new enthusiastic audio experience including Acer PureZone with built-in stereo microphones featuring beam forming and echo cancellation technologies. Note: Function availability will depend on what the optical disc being played supports. Battery pack characteristics The battery pack has the following characteristics: • Employs current battery technology standards. YouTube You can view the 30 most viewed video clips on YouTube by selecting YouTube from the Online Media homepage.23 The computer uses a battery pack that gives you long use between charges. These two buttons are similar to the left and right buttons on a mouse. Connecting antenna cables To connect your cables: 1 Plug the antenna connector into the RF jack of your computer. The plug only fits in a grounded power outlet. 1 Click on Start, All Programs, Acer, Acer eRecovery Management. Follow all warnings and instructions marked on the product.Turning the product off before cleaning/Unplug this product from the wall outlet before cleaning. 2 Remove any media, floppy disks or compact disks from the drive(s). Use a power outlet that is not properly grounded. When the DVD drive module is installed in the optical drive bay, you can play DVD movies on your computer. 4 Close the display cover. Lock key Description Caps Lock When Caps Lock is on, all alphabetic characters typed are in uppercase. You may find documents other than just manuals as we also make available many user guides, ... Your guides To help you use your Acer notebook, we have designed a set of guides: First off, the Just for Starters...poster helps you get started with setting up your computer. Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. The battery is recharged whenever you connect the computer to the AC adapter. 5 Reinstall the battery pack, and reconnect the AC adapter. To restore Windows from your previously burned backup discs, you will need to insert the first backup disc and enable the F12 Boot Menu via the BIOS Setup Utility. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. You can back up/restore the factory default image, and reinstall applications and drivers. Acer PureZone (only for certain models) The system provides you whole new enthusiastic audio experience including Acer PureZone with built-in stereo microphones featuring beam forming and echo cancellation technologies. Note: Function availability will depend on what the optical disc being played supports. Battery pack characteristics The battery pack has the following characteristics: • Employs current battery technology standards. YouTube You can view the 30 most viewed video clips on YouTube by selecting YouTube from the Online Media homepage.23 The computer uses a battery pack that gives you long use between charges. These two buttons are similar to the left and right buttons on a mouse. Connecting antenna cables To connect your cables: 1 Plug the antenna connector into the RF jack of your computer. The plug only fits in a grounded power outlet. 1 Click on Start, All Programs, Acer, Acer eRecovery Management. Follow all warnings and instructions marked on the product.Turning the product off before cleaning/Unplug this product from the wall outlet before cleaning. 2 Remove any media, floppy disks or compact disks from the drive(s). Use a power outlet that is not properly grounded. When the DVD drive module is installed in the optical drive bay, you can play DVD movies on your computer. 4 Close the display cover. Lock key Description Caps Lock When Caps Lock is on, all alphabetic characters typed are in uppercase. You may find documents other than just manuals as we also make available many user guides, ... Your guides To help you use your Acer notebook, we have designed a set of guides: First off, the Just for Starters...poster helps you get started with setting up your computer. Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. The battery is recharged whenever you connect the computer to the AC adapter. 5 Reinstall the battery pack, and reconnect the AC adapter. To restore Windows from your previously burned backup discs, you will need to insert the first backup disc and enable the F12 Boot Menu via the BIOS Setup Utility. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. You can back up/restore the factory default image, and reinstall applications and drivers. Acer PureZone (only for certain models) The system provides you whole new enthusiastic audio experience including Acer PureZone with built-in stereo microphones featuring beam forming and echo cancellation technologies. Note: Function availability will depend on what the optical disc being played supports. Battery pack characteristics The battery pack has the following characteristics: • Employs current battery technology standards. YouTube You can view the 30 most viewed video clips on YouTube by selecting YouTube from the Online Media homepage.23 The computer uses a battery pack that gives you long use between charges. These two buttons are similar to the left and right buttons on a mouse. Connecting antenna cables To connect your cables: 1 Plug the antenna connector into the RF jack of your computer. The plug only fits in a grounded power outlet. 1 Click on Start, All Programs, Acer, Acer eRecovery Management. Follow all warnings and instructions marked on the product.Turning the product off before cleaning/Unplug this product from the wall outlet before cleaning. 2 Remove any media, floppy disks or compact disks from the drive(s). Use a power outlet that is not properly grounded. When the DVD drive module is installed in the optical drive bay, you can play DVD movies on your computer. 4 Close the display cover. Lock key Description Caps Lock When Caps Lock is on, all alphabetic characters typed are in uppercase. You may find documents other than just manuals as we also make available many user guides, ... Your guides To help you use your Acer notebook, we have designed a set of guides: First off, the Just for Starters...poster helps you get started with setting up your computer. Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. The battery is recharged whenever you connect the computer to the AC adapter. 5 Reinstall the battery pack, and reconnect the AC adapter. To restore Windows from your previously burned backup discs, you will need to insert the first backup disc and enable the F12 Boot Menu via the BIOS Setup Utility. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. You can back up/restore the factory default image, and reinstall applications and drivers. Acer PureZone (only for certain models) The system provides you whole new enthusiastic audio experience including Acer PureZone with built-in stereo microphones featuring beam forming and echo cancellation technologies. Note: Function availability will depend on what the optical disc being played supports. Battery pack characteristics The battery pack has the following characteristics: • Employs current battery technology standards. YouTube You can view the 30 most viewed video clips on YouTube by selecting YouTube from the Online Media homepage.23 The computer uses a battery pack that gives you long use between charges. These two buttons are similar to the left and right buttons on a mouse. Connecting antenna cables To connect your cables: 1 Plug the antenna connector into the RF jack of your computer. The plug only fits in a grounded power outlet. 1 Click on Start, All Programs, Acer, Acer eRecovery Management. Follow all warnings and instructions marked on the product.Turning the product off before cleaning/Unplug this product from the wall outlet before cleaning. 2 Remove any media, floppy disks or compact disks from the drive(s). Use a power outlet that is not properly grounded. When the DVD drive module is installed in the optical drive bay, you can play DVD movies on your computer. 4 Close the display cover. Lock key Description Caps Lock When Caps Lock is on, all alphabetic characters typed are in uppercase. You may find documents other than just manuals as we also make available many user guides, ... Your guides To help you use your Acer notebook, we have designed a set of guides: First off, the Just for Starters...poster helps you get started with setting up your computer. Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. The battery is recharged whenever you connect the computer to the AC adapter. 5 Reinstall the battery pack, and reconnect the AC adapter. To restore Windows from your previously burned backup discs, you will need to insert the first backup disc and enable the F12 Boot Menu via the BIOS Setup Utility. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. You can back up/restore the factory default image, and reinstall applications and drivers. Acer PureZone (only for certain models) The system provides you whole new enthusiastic audio experience including Acer PureZone with built-in stereo microphones featuring beam forming and echo cancellation technologies. Note: Function availability will depend on what the optical disc being played supports. Battery pack characteristics The battery pack has the following characteristics: • Employs current battery technology standards. YouTube You can view the 30 most viewed video clips on YouTube by selecting YouTube from the Online Media homepage.23 The computer uses a battery pack that gives you long use between charges. These two buttons are similar to the left and right buttons on a mouse. Connecting antenna cables To connect your cables: 1 Plug the antenna connector into the RF jack of your computer. The plug only fits in a grounded power outlet. 1 Click on Start, All Programs, Acer, Acer eRecovery Management. Follow all warnings and instructions marked on the product.Turning the product off before cleaning/Unplug this product from the wall outlet before cleaning. 2 Remove any media, floppy disks or compact disks from the drive(s). Use a power outlet that is not properly grounded. When the DVD drive module is installed in the optical drive bay, you can play DVD movies on your computer. 4 Close the display cover. Lock key Description Caps Lock When Caps Lock is on, all alphabetic characters typed are in uppercase. You may find documents other than just manuals as we also make available many user guides, ... Your guides To help you use your Acer notebook, we have designed a set of guides: First off, the Just for Starters...poster helps you get started with setting up your computer. Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. The battery is recharged whenever you connect the computer to the AC adapter. 5 Reinstall the battery pack, and reconnect the AC adapter. To restore Windows from your previously burned backup discs, you will need to insert the first backup disc and enable the F12 Boot Menu via the BIOS Setup Utility. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. You can back up/restore the factory default image, and reinstall applications and drivers. Acer PureZone (only for certain models) The system provides you whole new enthusiastic audio experience including Acer PureZone with built-in stereo microphones featuring beam forming and echo cancellation technologies. Note: Function availability will depend on what the optical disc being played supports. Battery pack characteristics The battery pack has the following characteristics: • Employs current battery technology standards. YouTube You can view the 30 most viewed video clips on YouTube by selecting YouTube from the Online Media homepage.23 The computer uses a battery pack that gives you long use between charges. These two buttons are similar to the left and right buttons on a mouse. Connecting antenna cables To connect your cables: 1 Plug the antenna connector into the RF jack of your computer. The plug only fits in a grounded power outlet. 1 Click on Start, All Programs, Acer, Acer eRecovery Management. Follow all warnings and instructions marked on the product.Turning the product off before cleaning/Unplug this product from the wall outlet before cleaning. 2 Remove any media, floppy disks or compact disks from the drive(s). Use a power outlet that is not properly grounded. When the DVD drive module is installed in the optical drive bay, you can play DVD movies on your computer. 4 Close the display cover. Lock key Description Caps Lock When Caps Lock is on, all alphabetic characters typed are in uppercase. You may find documents other than just manuals as we also make available many user guides, ... Your guides To help you use your Acer notebook, we have designed a set of guides: First off, the Just for Starters...poster helps you get started with setting up your computer. Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. The battery is recharged whenever you connect the computer to the AC adapter. 5 Reinstall the battery pack, and reconnect the AC adapter. To restore Windows from your previously burned backup discs, you will need to insert the first backup disc and enable the F12 Boot Menu via the BIOS Setup Utility. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. You can back up/restore the factory default image, and reinstall applications and drivers. Acer PureZone (only for certain models) The system provides you whole new enthusiastic audio experience including Acer PureZone with built-in stereo microphones featuring beam forming and echo cancellation technologies. Note: Function availability will depend on what the optical disc being played supports. Battery pack characteristics The battery pack has the following characteristics: • Employs current battery technology standards. YouTube You can view the 30 most viewed video clips on YouTube by selecting YouTube from the Online Media homepage.23 The computer uses a battery pack that gives you long use between charges. These two buttons are similar to the left and right buttons on a mouse. Connecting antenna cables To connect your cables: 1 Plug the antenna connector into the RF jack of your computer. The plug only fits in a grounded power outlet. 1 Click on Start, All Programs, Acer, Acer eRecovery Management. Follow all warnings and instructions marked on the product.Turning the product off before cleaning/Unplug this product from the wall outlet before cleaning. 2 Remove any media, floppy disks or compact disks from the drive(s). Use a power outlet that is not properly grounded. When the DVD drive module is installed in the optical drive bay, you can play DVD movies on your computer. 4 Close the display cover. Lock key Description Caps Lock When Caps Lock is on, all alphabetic characters typed are in uppercase. You may find documents other than just manuals as we also make available many user guides, ... Your guides To help you use your Acer notebook, we have designed a set of guides: First off, the Just for Starters...poster helps you get started with setting up your computer. Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. The battery is recharged whenever you connect the computer to the AC adapter. 5 Reinstall the battery pack, and reconnect the AC adapter. To restore Windows from your previously burned backup discs, you will need to insert the first backup disc and enable the F12 Boot Menu via the BIOS Setup Utility. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. You can back up/restore the factory default image, and reinstall applications and drivers. Acer PureZone (only for certain models) The system provides you whole new enthusiastic audio experience including Acer PureZone with built-in stereo microphones featuring beam forming and echo cancellation technologies. Note: Function availability will depend on what the optical disc being played supports. Battery pack characteristics The battery pack has the following characteristics: • Employs current battery technology standards. YouTube You can view the 30 most viewed video clips on YouTube by selecting YouTube from the Online Media homepage.23 The computer uses a battery pack that gives you long use between charges. These two buttons are similar to the left and right buttons on a mouse. Connecting antenna cables To connect your cables: 1 Plug the antenna connector into the RF jack of your computer. The plug only fits in a grounded power outlet. 1 Click on Start, All Programs, Acer, Acer eRecovery Management. Follow all warnings and instructions marked on the product.Turning the product off before cleaning/Unplug this product from the wall outlet before cleaning. 2 Remove any media, floppy disks or compact disks from the drive(s). Use a power outlet that is not properly grounded. When the DVD drive module is installed in the optical drive bay, you can play DVD movies on your computer. 4 Close the display cover. Lock key Description Caps Lock When Caps Lock is on, all alphabetic characters typed are in uppercase. You may find documents other than just manuals as we also make available many user guides, ... Your guides To help you use your Acer notebook, we have designed a set of guides: First off, the Just for Starters...poster helps you get started with setting up your computer. Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. The battery is recharged whenever you connect the computer to the AC adapter. 5 Reinstall the battery pack, and reconnect the AC adapter. To restore Windows from your previously burned backup discs, you will need to insert the first backup disc and enable the F12 Boot Menu via the BIOS Setup Utility. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. You can back up/restore the factory default image, and reinstall applications and drivers. Acer PureZone (only for certain models) The system provides you whole new enthusiastic audio experience including Acer PureZone with built-in stereo microphones featuring beam forming and echo cancellation technologies. Note: Function availability will depend on what the optical disc being played supports. Battery pack characteristics The battery pack has the following characteristics: • Employs current battery technology standards. YouTube You can view the 30 most viewed video clips on YouTube by selecting YouTube from the Online Media homepage.23 The computer uses a battery pack that gives you long use between charges. These two buttons are similar to the left and right buttons on a mouse. Connecting antenna cables To connect your cables: 1 Plug the antenna connector into the RF jack of your computer. The plug only fits in a grounded power outlet. 1 Click on Start, All Programs, Acer, Acer eRecovery Management. Follow all warnings and instructions marked on the product.Turning the product off before cleaning/Unplug this product from the wall outlet before cleaning. 2 Remove any media, floppy disks or compact disks from the drive(s). Use a power outlet that is not properly grounded. When the DVD drive module is installed in the optical drive bay, you can play DVD movies on your computer. 4 Close the display cover. Lock key Description Caps Lock When Caps Lock is on, all alphabetic characters typed are in uppercase. You may find documents other than just manuals as we also make available many user guides, ... Your guides To help you use your Acer notebook, we have designed a set of guides: First off, the Just for Starters...poster helps you get started with setting up your computer. Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. The battery is recharged whenever you connect the computer to the AC adapter. 5 Reinstall the battery pack, and reconnect the AC adapter. To restore Windows from your previously burned backup discs, you will need to insert the first backup disc and enable the F12 Boot Menu via the BIOS Setup Utility. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. You can back up/restore the factory default image,