

[Click Here](#)



Welcome and thank you for selecting Fortinet products for your network configuration. This guide contains information about the administration of a FortiSwitch unit in standalone mode. In standalone mode, a FortiSwitch is managed by connected directly to the unit, either using the web-based manager (also known as the GUI) or the CLI. If you will be managing your FortiSwitch unit using a FortiGate, please see the guide Managing a FortiSwitch unit with a FortiGate. Supported Models This guide is for all FortiSwitch models that are supported by FortiSwitchOS. This includes the following models: FortiSwitch-28C, FortiSwitch-108D-POE, FortiSwitch-124D, FortiSwitch-124D-POE, FortiSwitch Rugged-124D, FortiSwitch-224D-POE, FortiSwitch-324B-POE, FortiSwitch-348B, FortiSwitch-448B, FortiSwitch-1024D, FortiSwitch-1048D, and FortiSwitch-3032D. Before You Begin Before you start administrating your FortiSwitch unit, it is assumed that you have completed the initial configuration of the FortiSwitch unit, as outlined in the QuickStart Guide for your FortiSwitch model and have administrative access to the FortiSwitch units web-based manager and CLI. How this Guide is Organized This guide is organized into the following chapters: System Settings contains information about the initial configuration of your FortiSwitch unit. Ports contains information on configuring your FortiSwitch ports. iX contains information on using 802.1x protocol. LACP Mode contains information on using a FortiSwitch in Link Aggregation Control Protocol (LACP) mode. TACACS contains information on using TACACS authentication with your FortiSwitch unit. Power over Ethernet contains information on using Power over Ethernet (PoE) with your FortiSwitch. FortiSwitch Rugged 112F-POE QSG FortiSwitch Rugged 108F QSG FortiSwitch-124G-Series-QSG FortiSwitch Rugged 216F-POE Quick Start Guide FortiSwitch 110G-FPOE QSG FortiSwitch 624F/648F Series QSG FortiSwitch T1024F-FPOE QSG FortiSwitch 548D Series QuickStart Guide FortiSwitch 148F Series QSG FortiSwitch 148E Series QuickStart Guide FortiSwitch 124F Series QSG FortiSwitch 108F Series QSG FortiSwitch 3032E QuickStart Guide FortiSwitch Rugged 424F POE QSG FortiSwitch Rugged 112D-POE QuickStart Guide FortiSwitch 448E Series QSG FortiSwitch 424E Series QuickStart Guide FortiSwitch 224D-FPOE QuickStart Guide FortiSwitch T1024E/1024E QuickStart Guide FortiSwitch M426E FPOE QSG FortiSwitch 224E Series QuickStart Guide FortiSwitch 248D Series QuickStart Guide FortiSwitch 1024D QuickStart Guide FortiSwitch 124E Series QuickStart Guide FortiSwitch 1048E QuickStart Guide FortiSwitch 248E Series QuickStart Guide FortiSwitch 108E Series QuickStart Guide FortiSwitch Rugged 124D QuickStart Guide FortiSwitch 448D QuickStart Guide FortiSwitch 424D Series QuickStart Guide FortiSwitch 424D-FPoE QuickStart Guide FortiSwitch 1048D QuickStart Guide FortiSwitch 3032D QuickStart Guide FortiSwitch 524D Series QuickStart Guide FortiSwitch-Compatible Transceivers

Fortiswitch 548d quick start guide. Fortiswitch 1048e quick start guide. Fortiswitch 124f quick start guide. Fortiswitch 148f quick start guide. Fortiswitch 2048f quick start guide. Fortiswitch 648f quick start guide. Fortiswitch 108f quick start guide. Fortiswitch 108f fpoe quick start guide. Fortiswitch 424e quick start guide. Fortiswitch 224e quick start guide. Fortiswitch 112d quick start guide. Fortiswitch 3032e quick start guide. Fortiswitch 448e quick start guide. Fortiswitch 1024e quick start guide. Fortiswitch 448e quick start guide. Fortiswitch 1024e quick start guide. Fortiswitch 108e quick start guide.