

I'm not robot





1. Charge the Camera Before First Use Charge the camera using the provided USB cable for about 2 hours. 2. Insert Micro SD Card Insert the micro SD card into the slot according to the right image direction. 3. Turn On and Start Recording Press and hold the top function button until the blue indicator turns on, then the pen starts recording automatically. 4. Stop and Restart Recording Press the top button once to stop recording, then again to restart it. 5. Charging and LED Indicator The LED flashes while charging, stays on when fully charged. 6. Standby Mode Long press the On/Off button, red LED illuminates and flashes once, camera is in standby mode. 7. Photo Mode Short press of the On/Off button takes a photo, long press starts video recording. 8. Video Recording Recording saves automatically every 3 minutes when memory card is full, oldest recordings are overwritten. 9. Shutdown Long press the On/Off button for 3 seconds to shut down. 10. Playback Connect the device to a computer using the USB cable, set up and view recordings using your favorite image viewer or media player. To access the settings, navigate to the USB root directory and open the text file, then enter the specified date and time format, such as 2020-04-28 14:14:30. The first 'Y' indicates whether the time watermark is enabled (change to 'N' to disable), while the second 'Y' controls Loop recording (change to 'N' to disable). If issues arise, a factory reset may be necessary; this can be achieved by carefully inserting a small pin-like object into the reset button.

[Hd 1080p camera instructions.](#) [Hd 1080p pen camera.](#) [Hd camera pen manual.](#) [Spy pen camera tutorial.](#) [Hd 1080p spy pen camera manual.](#)